

WashDry Cabinet

User Manual / Single-door standard model

LC-308



Read this manual carefully before use and keep it for future reference.

Manufacturer: Foshan Honghu Technology Co., Ltd.

Version: V1.0 | 2026.09.03

About this manual

How to use this manual

This manual covers the LC-308 single-door standard model. For custom units, also check the order drawing and the rating label.

It explains safety, installation, operation, care, troubleshooting and service. Read it completely before installation and first use, and share it with everyone who uses or maintains the cabinet.

Notices used in this manual

Notice	Meaning
WARNING	Risk of injury, electric shock, burns or fire. Always follow.
CAUTION	Ignoring it may damage the cabinet or garments.
TIP	Helps you choose programs, load garments and care for the cabinet.

Contents

Section	Page	Section	Page
Safety instructions	03	Keys	13
Product overview	04	Smart Wash&Dry and coats	14
Parts diagram	05	Smart Dry, Timed Dry, Custom Time	15
Specifications	06	Delay Wash&Dry and Delay Heat	16
Location and dimensions	07	Care and long idle periods	17
Water and power	08	Troubleshooting	18
First use	09	Warranty and service	19
Sorting and loading	10	Appendix A Quick guide	20
Detergent and fragrance	11	Appendix B Installation checklist	21
Control panel diagram	12	Appendix C Warranty card	22

Printing: A4 paper at 100% scale.

01 Read before use

Important safety instructions

To reduce the risk of fire, electric shock, burns or injury, follow these instructions.

WARNING Power

- Plug into a grounded outlet that matches the voltage on the rating label (110 V or 220 V), on a dedicated circuit. Do not use extension cords, power strips or adapters that defeat grounding.
- Rated power is 1600 W: about 14.5 A on the 110 V version and about 7.3 A on the 220 V version. If you are unsure about the wiring, outlet or circuit breaker, have a qualified electrician check it.
- If the cord or plug is damaged, wet or unusually hot, stop using the cabinet and have it replaced by your seller or a qualified person. Do not handle the plug with wet hands.
- Unplug the cabinet before cleaning or maintenance, and when it will not be used for a long time.

WARNING Water, heat and flammables

- Indoor use only. Do not install outdoors, where it can get rained on, or where it may freeze. Do not spray water on the control panel, plug or electrical parts.
- Do not load garments soiled with gasoline, solvents, oils or other flammable substances. Do not store flammable items in the cabinet.
- The chamber and garments are hot after drying or heating. Wait a moment before removing garments.
- Do not block the ventilation openings. Leave at least 5 cm between the back of the cabinet and the wall.
- Do not put anything on top of the cabinet: steam vents through the top during drying.
- If you notice a leak, a burning smell, smoke or overheating, stop using the cabinet. If it is safe to do so, unplug it, close the water tap and contact your seller.

WARNING Door, children and repairs

- Do not let children operate, climb on or get into the cabinet. Before each start, check that no person, pet or foreign object is inside.
- Close the door before starting. To open the door during a cycle, press Start/Pause first.
- Do not stare at the interior light for long periods.
- Do not repair or modify the cabinet yourself. Repairs must be done by your seller or a qualified technician.

Intended use For washing, drying and caring for garments on hangers, in homes and in commercial settings such as hotels and laundries. Water, drain and electrical connections must comply with local regulations.

Product overview

Garments hang on hangers while one cabinet spray-washes, rinses, dries and cares for them.

There is no drum: garments stay on their hangers and are never tumbled or rubbed. Three ceiling nozzles spray diluted LINGCHONG detergent over the garments, clean water rinses them, and the water drains through the drain grille in the floor. Warm air then dries them, and the temperature and humidity sensors stop the cycle when they are dry.



Exterior




Door open

Part	Purpose
Control panel	On the upper door. Select the fabric type and program; shows temperature, time or humidity.
Hanging rail	At the top of the chamber. Hang garments on hangers; coats also hang here.
Spray nozzles (3)	Spray diluted detergent and rinse water.
Middle shelf (removable)	Fit it for sweaters and knitwear so the wet weight does not stretch them.
Drain grille	Wash and rinse water drains through it. Do not put garments or other items on it.
Detergent box (white)	At the lower right of the chamber; this is where you fill detergent. Each wash draws about 50 mL.
Magnetic door catch	At the lower left of the chamber; holds the door closed.
Fragrance box	At the top of the chamber. Add fragrance chips for a light, fresh scent.
Door hooks	For ties, scarves, underwear, socks and other small items.
Water inlet / drain	At the lower part of the cabinet, just above the base. Connect to a cold-water tap and a drain.
Rating label	On the back panel. Shows the model, serial number, rated voltage and power.

The cabinet body is made of 5-layer fluorocarbon aluminum composite panels that resist moisture and corrosion, so it suits bathrooms and laundry rooms.

Parts diagram

Approximate locations of the main parts referred to in this manual.

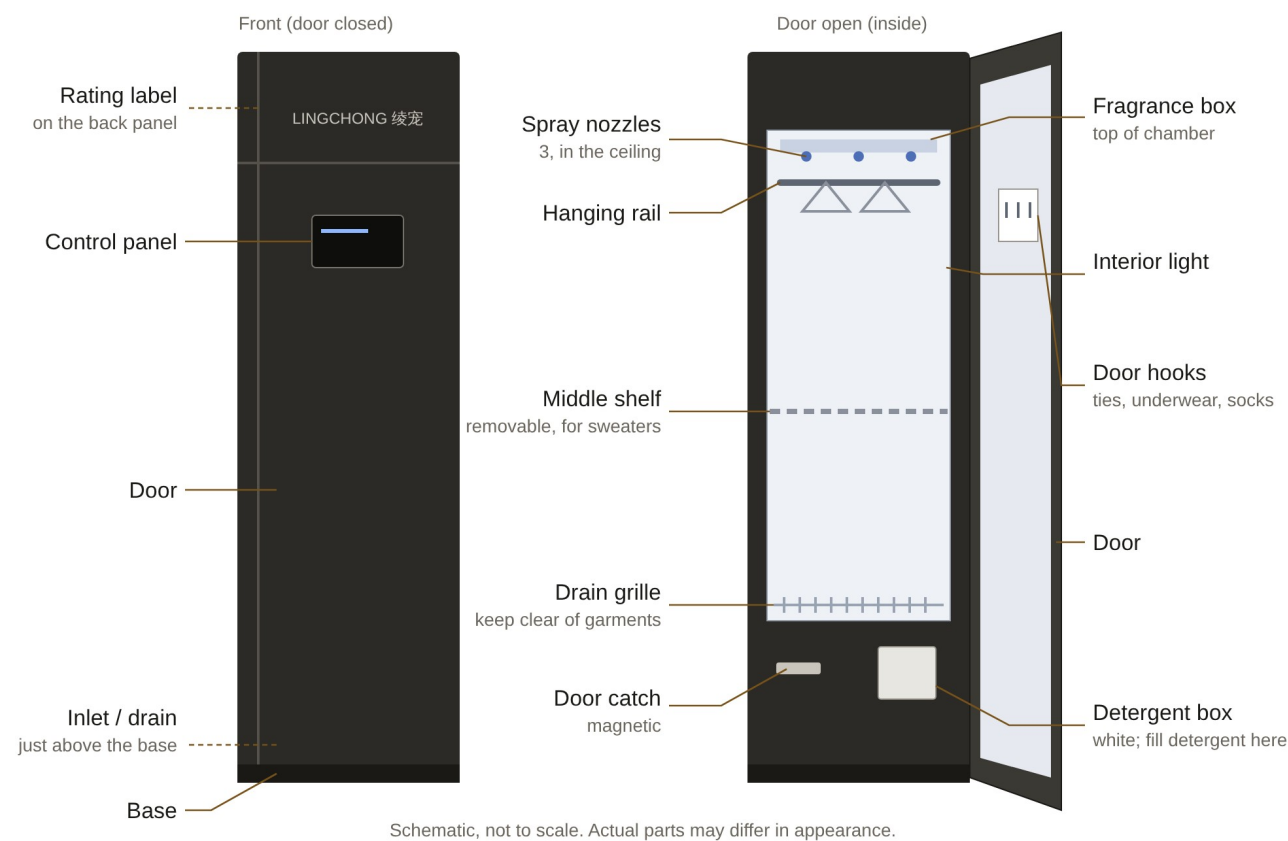

Schematic: main parts of the LC-308 single-door standard model

Accessories

After unpacking, check the accessories provided against the packing list, for example the inlet hose and connector, drain hose, middle shelf and this manual. Contact your seller if anything is missing or damaged.

Specifications

Item	Specification
Model	LC-308 (single-door standard)
Product dimensions (H × W × D)	1900 × 600 × 620 mm
Chamber (H × W × D)	1450 × 560 × 500 mm
Package dimensions (H × W × D)	2080 × 680 × 710 mm
Net / gross weight	80 kg / 96 kg
Rated voltage	110 V or 220 V, see the rating label
Rated power	1600 W (drying about 1500 W, washing about 10 W)
Operating current	110 V: about 14.5 A; 220 V: about 7.3 A
Load	8 light or 4 heavy garments per cycle (by piece)
Cycle time	Full wash, dry and care: 2–3 hours; washing stage about 30 minutes
Timed Dry	60 / 120 / 150 / 180 minutes
Water / energy per cycle	About 60 L / about 3.5 kWh
Water pressure	0.1–0.4 MPa (normal mains pressure), cold water
Noise	≤ 40 dB
Detergent	About 50 mL per wash, drawn automatically
Connections	Cold-water inlet, drain, grounded outlet
Body	5-layer fluorocarbon aluminum composite
Clearance	At least 5 cm between the back and the wall; top kept clear (steam vents through the top)

V1.0 | 2026-09-03

03 Installation

Location and dimensions

Installation should be done by your seller's installer or another competent person.

1. Unpack and inspect

Remove all packaging. Check the cabinet, door and accessories for damage, and check that the voltage and plug on the rating label match your order. Photograph any shipping damage and report it to your seller right away. Keep the packaging until you have confirmed the cabinet works.

2. Move the cabinet


Net weight is 80 kg: move it with at least two people, preferably upright. Do not lift it by the door, control panel or hoses. Check doorways, corridors and corners first (package 2080 × 680 × 710 mm).

3. Choose the location

Indoors, on a flat, solid floor with a 600 × 620 mm footprint and at least 1900 mm of height, near a cold-water tap, a drain and a grounded outlet. Keep away from direct sunlight, heat sources and freezing conditions.

4. Leave clearance

Leave at least 5 cm between the back of the cabinet and the wall for ventilation. Keep the top clear and put nothing on it, because steam vents through the top during drying. Leave room in front for the door to open fully. If the cabinet has adjustable feet, level it so it does not rock.

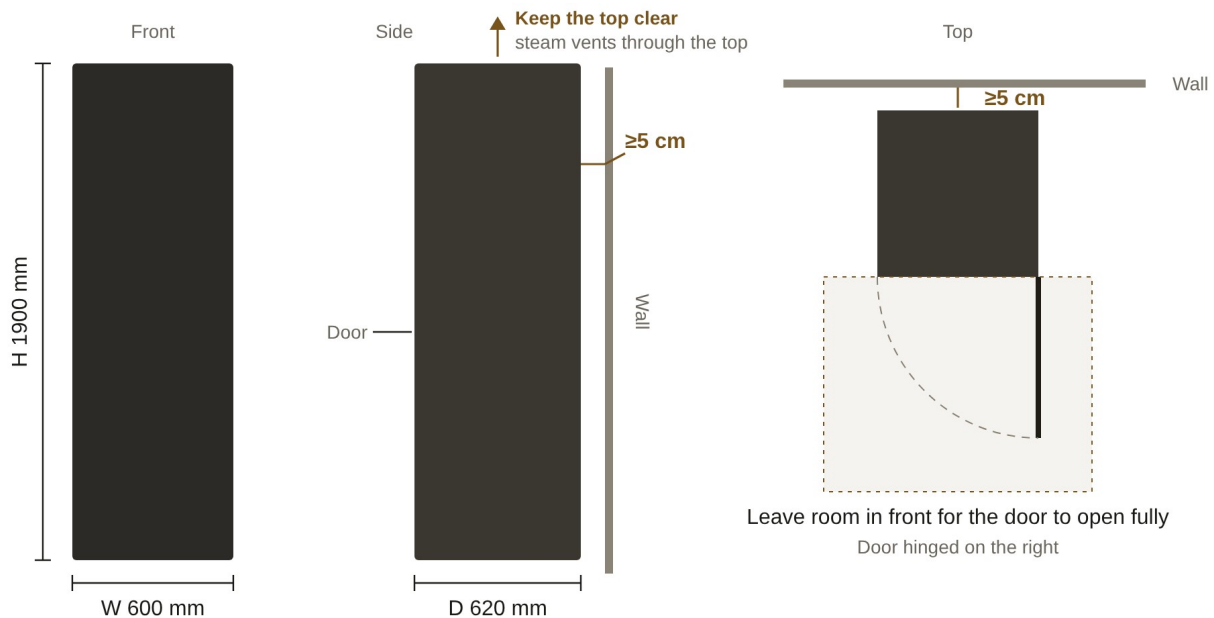

Installation diagram (not to scale)

Built-in installation When building the cabinet into a wardrobe or wall unit, make the opening larger than the cabinet, keep the 5 cm rear clearance, do not close off the top (steam vents through it), and leave room for the water and drain connections and for future service. Build custom enclosures to the order drawing.

03 Installation

Water and power

It connects like a washing machine: one water inlet, one drain and one grounded outlet. The inlet and drain are at the lower part of the cabinet, just above the base.

Connection standards

Item	China	Europe / North America
Water inlet	G3/4 male thread; washing-machine tap quick connector for a standard 1/2" tap	Europe: G3/4 (3/4" BSP) North America: 3/4" GHT (standard washer hose thread)
Water pressure	0.1–0.4 MPa (normal mains pressure)	0.1–0.4 MPa (about 1–4 bar / 15–58 psi)
Water temperature	Cold	Cold
Drain	Drain hose into a floor drain or waste pipe (Φ40–50 mm)	Drain hose into a standpipe (at least 1½" / about 38 mm inside diameter) or a sink drain

Connections are supplied to suit the destination market. Use the hoses and connectors delivered with your unit.

Water inlet

- Connect the inlet hose to a cold-water tap with a shut-off valve, using the connector provided.
- Tighten by hand, open the tap and check every connection for leaks.
- Keep the tap fully open during operation. Do not kink or crush the hose, and do not reuse old hoses. Low water pressure makes filling slower.

Drain

- Put the drain hose into a standpipe, floor drain or sink and secure it so it cannot slip out during operation.
- The drain point must be lower than the cabinet's drain outlet. Do not kink the hose or put weight on it.

Power

Item	Requirement
Voltage	The outlet voltage must match the rating label: 110 V units on 110 V, 220 V units on 220 V. The cabinet does not switch between voltages.
Outlet and circuit	Plug directly into a grounded wall outlet, preferably on a dedicated circuit. The 110 V version draws about 14.5 A; make sure the wiring and breaker are rated for it.
Plug	The plug suits the destination market. Do not remove the ground pin or modify the plug. If the plug must be changed, have a qualified electrician do it to local code.

03 Installation

First use

After installation, run one test cycle. The installation checklist is in Appendix B (page 21).

CAUTION Check the water and drain connections for leaks before connecting power.

1. Fill detergent

Open the white detergent box at the lower right of the chamber and fill LINGCHONG detergent to the mark (see page 11).

2. Switch on

Make sure the water tap is open, then press Power. The display lights up.

3. Run one Smart Wash&Dry

Hang a few everyday garments, close the door, press Daily Clothing, then Smart Wash&Dry.

4. Watch the cycle

Check that water fills and drains normally, that no connection leaks, and that the display shows no alarm. If you see a leak, overheating, an unusual smell or a tripped breaker, stop and contact your seller.

5. Complete the handover

When the test cycle is normal, fill in the installation checklist in Appendix B and ask your seller to complete the warranty card in Appendix C.

Sorting and loading

Read the care label first, then choose the matching fabric type.

Garments	How to load
Everyday clothes	Shirts, T-shirts, trousers, jackets and other daily wear. Press Daily Clothing.
Silk	Wash and dry separately. Press Silk. Do not mix with everyday clothes or coats.
Wool	Wash and dry separately. Press Wool. Do not mix with everyday clothes or coats.
Sweaters, knitwear	Fit the middle shelf. Hang the garment and rest the lower part flat on the shelf so the wet weight does not stretch it.
Coats, long jackets	Hang on the rail and press Coat. Leave space around it; see page 14.
Ties, underwear, socks	Hang on the door hooks.
Do not load	Shoes, leather, fur, valuable mink, and dry-clean-only garments.

Before loading

- Check the care labels. Empty pockets of coins, keys, lighters and similar items. Close zippers and fasten buttons.
- Sort by fabric and color; wash dark garments and those that may bleed separately.
- Leave space between garments so detergent, water and warm air can reach them. Do not let garments get caught in the door.
- The drain grille is for drainage. Do not put garments or other items on it.
- Reference load: 8 light or 4 heavy garments. Load fewer pieces when mixing.

Stain removal
Sweat and water-based stains such as soy sauce, drinks and juice come out well. Surface oil washes out; deep, set-in oil stains may leave a faint mark, so pre-treat them before washing.

04 Before use

Detergent and fragrance

Use the LINGCHONG detergent made for the spray system.

Filling detergent

1. Find the detergent box

Open the door. The white box at the lower right of the chamber is the detergent filling point.

2. Fill

Open the lid and pour in detergent up to the mark. Do not overfill.

3. Close the lid

The cabinet is ready. Each wash draws about 50 mL automatically and dilutes it, so you do not add detergent for every load.

Item	Amount
Per wash	About 50 mL, drawn automatically
One 0.75 L refill	About 15 washes
One 1.5 L bottle	About 30 washes, or two refills

CAUTION Do not use high-foam detergents or washing powder. Ordinary detergents do not suit the spray system: they clean noticeably less well and can leave foam. Do not put fragrance oils or other chemicals in the detergent box.

Fragrance

The fragrance box at the top of the chamber holds fragrance chips that give garments a light, fresh scent during the cycle. Replace the chips when the scent fades. Fragrance does not replace detergent.

Control panel diagram

Keys are labeled in Chinese and English. Use the colors to find each group of keys.



- ① Fabric type: press first

② Program: press second

Durations, + / – to set time

Delay (wash & dry / heat)

Power, Open up, Start/Pause

Auto Clean, Fault Alarm

Schematic: key positions match the actual panel; colors only group the functions.

Three steps

Step 1	Press a blue key to choose the fabric type: Daily Clothing, Coat, Silk or Wool.
Step 2	Press a brown key to choose the program: Smart Wash&Dry, Smart Dry or Timed Dry.
Step 3	Smart Wash&Dry and Smart Dry start as soon as you press them. For Timed Dry, choose a green time key, then press Start/Pause. Use the green + / – keys to set a custom time or a delayed start.

Display

The left display shows the chamber temperature (Temp). The right display shows remaining time, countdown or chamber humidity (Time / Humidity).

Keys

Key names match the text printed on the panel.

Fabric-type keys (blue)

Key	Chinese label	Use
Daily Clothing	普通衣物	Everyday garments
Coat	大衣	Coats, long jackets and other bulky items
Silk	真丝	Silk and other delicate fabrics; wash and dry separately
Wool	羊毛	Wool garments; wash and dry separately

Function keys

Key	Chinese label	Use
Smart Wash&Dry	智能洗烘	Washes, rinses and dries, then stops by itself
Smart Dry	智能干衣	Drying only; the sensors stop it when garments are dry
Timed Dry	定时干衣	Dries for the selected time
60 / 120 / 150 / 180min	—	Timed Dry duration
+ / – (Custom Time)	自定义时间	Sets your own drying time; sets the start time for delayed functions
Delay Wash&Dry	预约洗烘	Starts a wash-and-dry cycle at a set time
Delay Heat	预约加热	Starts warming garments at a set time, for cold mornings
Auto Clean	自动清洁	Cleans the chamber
Power	电源	On / off
Open up	开门	Electronic door release
Start / Pause	启动/暂停	Starts or pauses the selected function
Fault Alarm	故障报警	Lights with an alarm when a fault is detected; see page 18

05 Operation

Smart Wash&Dry and coats

Check that there is detergent and the water tap is open before starting.

Smart Wash&Dry

1. Load and close the door

Sort and hang garments as on page 10, then close the door.

2. Choose the fabric type

Press Daily Clothing, Coat, Silk or Wool.

3. Press Smart Wash&Dry

The cabinet spray-washes, rinses with clean water and dries, then stops by itself. A full cycle takes about 2–3 hours.

Washing a coat

1. Hang the coat

Hang the coat on the rail so it hangs freely, clears the floor and has space around it. Do not crowd other garments around it just because there seems to be room.

2. Press Coat

Selects the coat setting.

3. Press Smart Wash&Dry

The cabinet washes and dries the coat, then stops.

Pausing and finishing

- Press Start/Pause to pause; press it again to continue. To open the door, pause first, then press Open up. Mind the warm air if you open the door during drying.
- Remove garments soon after the cycle ends to keep creases away. Leave the door slightly open after use to air the chamber.

05 Operation

Smart Dry, Timed Dry and Custom Time

All three dry without washing, and all three need a fabric type first.

Smart Dry: stops when dry

1. Load and choose the fabric type

Hang the garments, close the door and choose the fabric type.

2. Press Smart Dry

Drying starts. The temperature and humidity sensors stop the cabinet when the garments are dry. The time depends on the garments and load.

Timed Dry: for a set time

1. Choose the fabric type

Choose to suit the garments.

2. Choose a time

Press 60min, 120min, 150min or 180min.

3. Press Start/Pause

The display counts down and the cabinet stops when the time is up.

Custom Time

1. Choose the fabric type

Hang the garments, close the door and choose the fabric type.

2. Set the drying time with + or –

The + and – keys are at the upper right of the panel, with Custom Time printed between them.

3. Press Start/Pause

Drying starts and stops when the time is up.

TIP If garments are not fully dry, reduce the load and run Smart Dry again, or choose a longer time. To freshen the jacket you will wear today before you go out, run a short Timed Dry with the fragrance box.

05 Operation

Delay Wash&Dry and Delay Heat

Both functions set a start time, on a 24-hour clock.

Delay Wash&Dry

1. Load and choose the fabric type

Hang the garments, close the door and choose the fabric type.

2. Press Delay Wash&Dry

The display flashes. Set the start time with + or – (24-hour clock).

3. Press Start/Pause to confirm

The function light turns on. The cycle starts at the set time and stops by itself when finished.

Example Setting 07:30 means the cycle starts at 07:30 and finishes about 2–3 hours later. To collect garments before 7:30 a.m., set the start time to 4:30 a.m. or earlier.

Delay Heat

On cold days, hang tomorrow's clothes in the cabinet the night before. It warms them at the set time so they are warm when you put them on.

1. Hang the garments

Hang what you will wear and close the door.

2. Press Delay Heat

Set the start time with + or –.

3. Press Start/Pause

Warming starts at the set time. Set it a little before you plan to dress, and mind the temperature when you take garments out.

To cancel a delayed start, switch the power off and set it again.

Care and long idle periods

The one-piece chamber has no hidden gaps; regular wiping keeps it clean.

Item	How	How often
Auto Clean	Empty the chamber, close the door and press Auto Clean.	Weekly in commercial use; as needed at home
Drain grille	Remove lint and debris so water drains freely.	Check after each use
Chamber	Unplug, then wipe with a soft cloth.	Routine
Exterior	Wipe with a well-wrung soft cloth, then dry. No abrasive cleaners or solvents.	Routine
Control panel	Wipe with a dry soft cloth. Do not spray water on it.	Routine
Detergent box	Wipe off any detergent around the opening with a damp cloth.	When filling
Water valve filter	Self-cleaning; does not need to be removed.	—
Inlet and drain hoses	Check for kinks, wear or leaks; tighten connections if needed.	Every few months

Wear parts

The exhaust fan and the temperature and humidity sensor are standard wear parts. For replacement, contact your seller to arrange a technician.

Long idle periods and moving

- Long idle periods: unplug the cabinet, close the water tap, clean the chamber and leave the door open.
- Before leaving the cabinet where it may freeze, contact your seller to drain the remaining water from the lines.
- Moving: unplug, close the tap, disconnect the hoses and drain them, move the cabinet upright, then reinstall and check it as on pages 7–9.

07 Troubleshooting

Troubleshooting

Check the table below before calling for service. Do not open electrical parts.

Problem	Possible cause and solution
Does not start	Check that the outlet has power and the plug is in. Make sure the door is closed and a fabric type and program are selected, then press start.
No water or slow filling	Check that the tap is open, the inlet hose is not kinked and the mains pressure is not too low. If the hose connector has a screen filter, check that it is not blocked.
Water on the chamber floor, slow draining	Check that the drain grille is not blocked by garments, lint or debris. Check that the drain hose is not kinked and the drain point is lower than the drain outlet.
Leaking	Tighten any loose inlet or drain connections and make sure the drain hose is secured. For a significant leak, unplug, close the tap and contact your seller.
Garments not fully dry	Load fewer pieces so warm air can circulate. Run Smart Dry again or choose a longer time.
Stains remain	Check the detergent level. Pre-treat heavy oil stains before washing.
Foam residue	Use LINGCHONG detergent only; no high-foam detergents or washing powder.
Odor in the chamber	Run Auto Clean and leave the door slightly open after use. Check that water drains freely.
Unusual noise	Check that the cabinet is level and no garment is caught in the door. Pause and rearrange the load.
Fault Alarm lights up	Stop the cycle, note what the display shows and contact your seller.
Display does not respond	Unplug for one minute, plug back in and switch on. If it still does not respond, contact your seller.

If a problem is not listed or continues after these steps, stop using the cabinet and contact your seller.

When you call for service, have ready

Model / serial no.: _____ Purchase date: _____

Program and garments: _____ Display shows: _____

Problem and when it occurs: _____

Warranty and service

Contact the seller you bought the cabinet from first. Their local service team handles installation, repairs and parts.

Item	Terms
Warranty period	3 years from the date the unit ships from the factory.
Coverage	All parts, except damage caused by misuse.
Parts under warranty	Free of charge. Parts reach your local distributor within one week after the fault is confirmed.
Local repairs	Handled by your local distributor's service team, trained and supplied with parts by the manufacturer.
After the warranty	Parts are supplied at factory cost. Labor and local delivery are priced by your distributor.
Manufacturing defects	If the factory confirms a manufacturing defect, the whole unit is replaced and the factory pays the related freight.

Not covered

- Damage caused by misuse, or by installation, use or care that does not follow this manual.
- Damage caused by unauthorized repairs or modifications.
- Damage from fire, flood, lightning, accidents or other events beyond control.
- Consumables such as detergent and fragrance chips.

Keep your proof of purchase (order confirmation or proforma invoice) and the warranty card in Appendix C, and note the serial number on the rating label.

Contact

Manufacturer: Foshan Honghu Technology Co., Ltd.
Address: Workshop 2, No. 1 Chengye Road, Gujian Village, Daliang, Shunde District, Foshan, Guangdong, China
Email: lhy@gdlingchong.com
Website: gdlingchong.com

Appendix A Print separately

Quick guide

For users who have completed installation and read the safety instructions.

Function	Steps
Smart Wash&Dry	Load, close door → fabric type → Smart Wash&Dry → finishes and stops
Coat	Hang on the rail with space around it → Coat → Smart Wash&Dry
Smart Dry	Load, close door → fabric type → Smart Dry → stops when dry
Timed Dry	Fabric type → 60 / 120 / 150 / 180min → Start/Pause
Custom Time	Fabric type → + / - to set the time → Start/Pause
Delay Wash&Dry	Fabric type → Delay Wash&Dry → + / - to set the start time → Start/Pause
Delay Heat	Hang garments → Delay Heat → + / - to set the start time → Start/Pause
Auto Clean	Empty the chamber → close door → Auto Clean

Before every start

Check care labels; empty pockets; sort by fabric; leave space between garments and keep them clear of the door; keep the drain grille and the top clear; close the door. Before washing, check that the tap is open and there is enough detergent.

Three loading rules

- ① Wash and dry silk and wool separately, not with everyday clothes or coats.
- ② Fit the middle shelf for sweaters.
- ③ Do not load shoes, leather, fur or dry-clean-only garments.

Appendix B

Installation checklist

To be checked by the installer and the customer together, then kept with the proof of purchase.

Check	What to confirm	Result
Model and label	Model, voltage and serial number match the order.	☐ OK ☐ Follow up
Placement	Stable; at least 5 cm from the wall at the back; top clear; door opens fully.	☐ OK ☐ Follow up
Water inlet	Connector matches; tap open; no leaks.	☐ OK ☐ Follow up
Drain	Hose secured; drain point lower than the outlet; drain grille clear.	☐ OK ☐ Follow up
Electrical	Grounded outlet; voltage matches the label; no extension cord.	☐ OK ☐ Follow up
Chamber and accessories	All packaging removed; accessories counted.	☐ OK ☐ Follow up
Detergent	LINGCHONG detergent filled to the mark.	☐ OK ☐ Follow up
Test cycle	One Smart Wash&Dry completed; filling, draining and display normal.	☐ OK ☐ Follow up

Installation record

Model / serial no.	LC-308 / _____
Voltage	☐ 110 V ☐ 220 V
Installation address	_____
Installation date	_____
Installer / phone	_____
Customer signature / date	_____

Revision history

Version	Date	Notes
V1.0	2026-09-03	First release (English).

The latest version of this manual is published at gdlingchong.com.

Appendix C

Warranty card

To be completed and stamped by the seller at delivery. Show this card and your proof of purchase when requesting service.

LINGCHONG WashDry Cabinet Warranty Card			
Model	LC-308	Voltage	☐ 110 V ☐ 220 V
Serial no.		Ship date	
Purchase date		Installation date	
Customer / company		Phone	
Installation address			
Seller			
Seller phone		Seller stamp	
Warranty: 3 years from the factory ship date; parts free of charge for damage not caused by misuse. Full terms on page 19.			

Service record

Date	Problem	Action taken	Technician

Manufacturer: Foshan Honghu Technology Co., Ltd. · lhy@gdlingchong.com · gdlingchong.com